


Switch-disconnector-fuse STVD02

INSTALLATION INSTRUCTION


Switch-disconnector-fuse STVD02

Dimensions [mm]

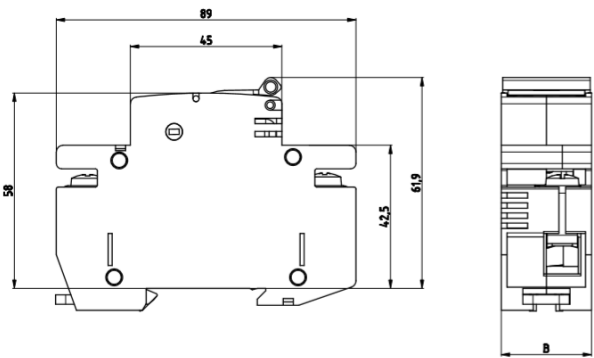


TYPE	1p	1p + N	2p	3p	3p + N
B [mm]	26,8	53,6	53,6	80,4	107,2

Installation

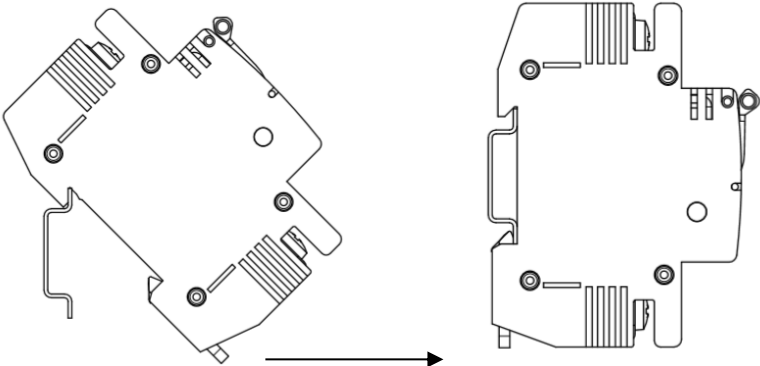

Snap on DIN rail.

Fuse link replacement

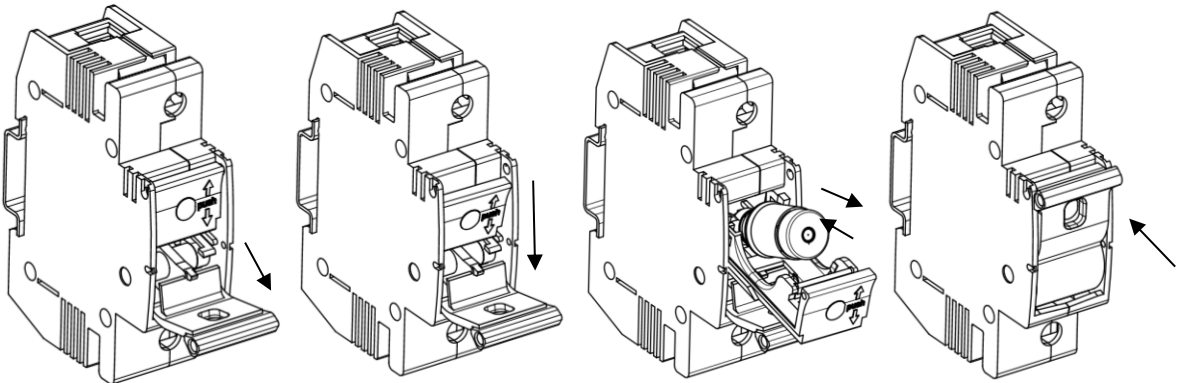


Open the panel.

Push down the
fuse-link
holder.

Replace the
fuse-link.

Push back the fuse-
link holder and close
the panel.

Disassembly

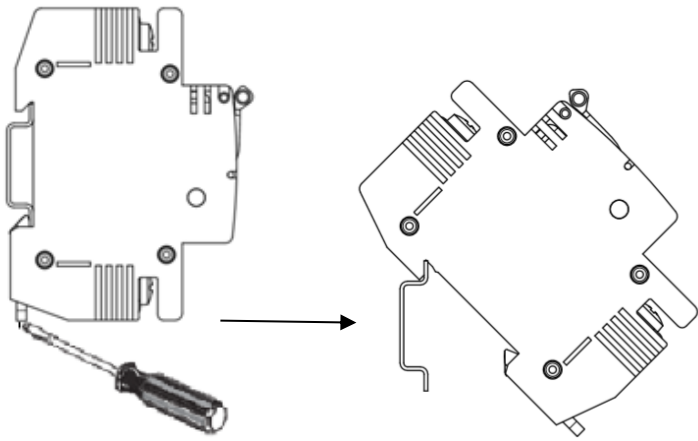

Using a screwdriver
pull down on the
plastic snap-on unit.



ETI, d.o.o.
Obrezija 5
SI-1411 Izlake

